

INSTRUCTION MANUAL



POWER SUPPLIES UNLIMITED

EB-32-30

NJ E CORPORATION

Kenilworth, New Jersey

INSTRUCTION
MANUAL

MODEL

EB-32-30

DC POWER SUPPLY

NJE CORPORATION
KENILWORTH, N.J.

SECTION I

EA-EB LINE SPECIFICATION

Input: 115 volts, 60 cycles per second, single phase, 85% power factor at full load. Line current per chart below.

Output: Continuously variable by front panel control from zero to rated voltage per chart below.

Ripple: 1% RMS maximum.

Regulation: Line, $\pm 0.5\%$ for line voltage variations of $\pm 10\%$ on ELA and ELB models. EA and EB models vary proportionally with input line variations.

Load, $\pm 2\%$ of maximum output voltage rating no load to full load for EA models.

$\pm 5\%$ of maximum for EB models.

$\pm 2.5\%$ of maximum for ELA models.

$\pm 5.5\%$ of maximum for ELB models.

RATING CHART

Model Number	Voltage Range (Volts)	Current Range (Amperes)	Input Line Current Amperes	*Rack Dimensions (Inches)			Add Ht. with Line Regulator†	** Weight Lbs.
				High*	Wide*	Deep†		
32-10	0-32	0-10	5	12-1/4	19	14-5/8	5-1/4	60
32-20	0-32	0-20	8	17-1/2	19	16-5/8	12-1/4	80
32-30	0-32	0-30	12	17-1/2	19	16-5/8	10-1/2	120
80-4	0-80	0-4	5	12-1/4	19	14-5/8	5-1/4	60
80-8	0-80	0-8	8	17-1/2	19	16-5/8	12-1/4	80
80-15	0-80	0-15	15	17-1/2	19	16-5/8	10-1/2	120
160-4	0-160	0-4	8	17-1/2	19	16-5/8	12-1/4	80
160-8	0-160	0-8	17	17-1/2	19	16-5/8	15-3/4	120

* Cabinet height is 1-3/4" additional, width approx. 3" additional.

+ Measured behind panel. Cabinets are 15" or 18" deep.

** Weight given is for rack model, without line regulator.

• Cabinet models with line regulators are 36-3/4" high (except 32-10 & 80-4 are 19-1/4") and 22" wide.

SECTION 2

THEORY OF OPERATION

2-1. GENERAL

The information in this section applies in general to all conventional metallic-rectifier type power supplies. Specific circuit details pertaining to this power supply should be obtained, after reading this theoretical treatment, from the circuit diagram at the rear of this manual.

2-2. POWER SUPPLY CIRCUIT

The elements of a metallic rectifier power supply are as follows: (refer to figure 1)

a. A variable power transformer, whose output voltage is adjustable from zero to approximately 120% of the input voltage value. In three-phase units a separate variable power transformer is used for each phase, and the three rotors are ganged to one control shaft.

b. A transformer-rectifier circuit that steps the input voltage up or down as required to provide the rated range of output voltage, and converts the ac current to pulsating direct current. The rectifier circuit used will depend upon the current range of the unit. It will be a full-wave centertapped configuration in light-current supplies, and a full-wave bridge, three-phase full wave, or six-phase star configuration in heavy-current units.

c. A low-pass, single-section, choke-input filter, designed to suppress the ripple component in the pulsating dc voltage.


d. A heavy-duty bleeder resistor. This bleeder "pre-loads" the metallic rectifier, so that a minimum current is drawn even when the external load is disconnected. At very light loads the rectifier exhibits a greater variation in its internal voltage drop, for a given change in load current, than it does at heavier loads. The bleeder, by imposing an initial load, thus causes the rectifier to be operated in a load region which results in less load regulation by the rectifier. (In cases where the external load is permanently connected to the supply, this bleeder resistor can be disconnected, thereby making an additional amount of current available for use in the load, with no sacrifice in regulation.) In addition to acting as an initial load, the bleeder resistor also assures rapid discharge of the filter capacitors, removing the shock hazard for personnel inspecting or maintaining the equipment after shutdown.

In this "brute-force" type of dc power supply, tight load regulation is achieved through the use of transformers and chokes with low internal resistance, and heavily-derated rectifiers. The

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_10150

total series resistance is low, and the resultant voltage drop due to the passage of the load current is correspondingly small. The change in load voltage, as the load current is varied from zero to maximum, is consequently a relatively small one. There is no compensation for line voltage changes, however, and a line variation of a given percentage will result in a dc output voltage change of the same percentage. This effect is unimportant in many applications, where line variations would have an adverse effect, the line regulated models are employed. These units are provided with one or more line voltage regulating transformers ahead of the variable power transformer. The output of the regulating transformer varies less than 0.5% for an input variation of 10% and thus provides a very steady AC source for the power supply circuit.

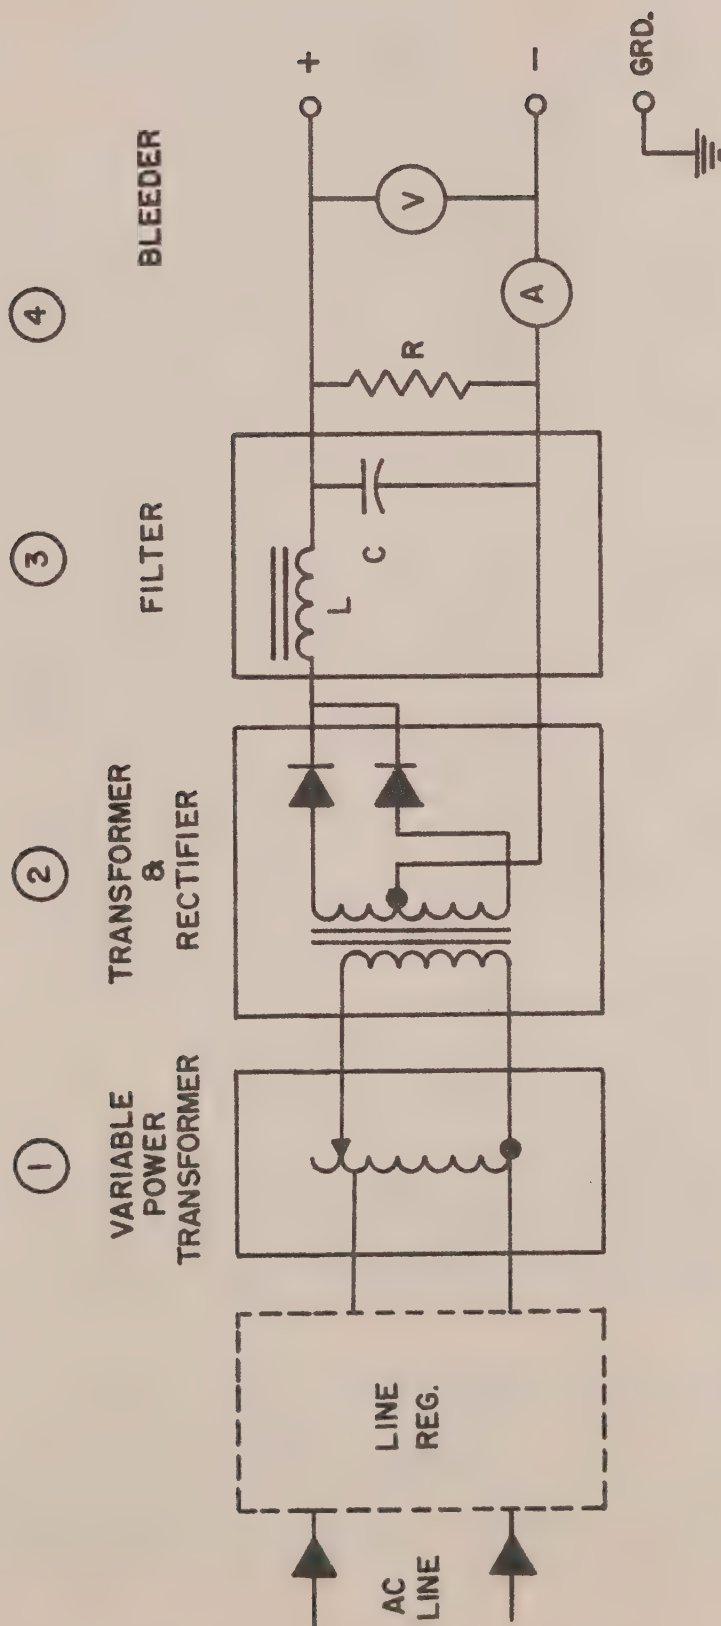

NOTE: LINE REGULATOR OPTIONAL.

FIGURE I. METALLIC RECTIFIER POWER SUPPLY

SECTION 3

MAINTENANCE

3-1. GENERAL

Care should be exercised to prevent the accumulation of dust and dirt in the equipment. An adequate natural flow of clean, fresh air, free of corrosive gases, should be maintained at all times the equipment is in operation. Sudden changes in temperature and humidity should be guarded against. While the equipment will operate over a wide range of physical conditions, every effort should be made to maintain the temperature of the room over zero degrees C and below plus 45 degrees C with a minimum of humidity.

3-2. PREVENTIVE MAINTENANCE

A well-organized maintenance program will materially aid dependable operation and reduce 'down time' of the equipment to a minimum. A maintenance program, if followed, will often forestall trouble and breakdowns, where the trouble is at once clear, to general overall wear and deterioration of parts over a long period of time. Particularly guard against the latter condition by conducting complete inspections at regular intervals. It is suggested that the equipment be tested shortly after it is put into operation for the first time, and the results be recorded as a reference for comparison with subsequent weekly tests. In addition to voltage measurements, a check of the voltage at the output of the rectifier and at the output terminals should be made with an oscilloscope, or if none is available, an ac voltmeter in series with a dc blocking capacitor.

The following procedure is recommended at intervals of 3 to 6 months:

- a. Disconnect power supply from input line.
- b. Remove cabinet, covers and/or bottom plate, and inspect the circuitry for dust or dirt deposits (which should be blown or brushed away) and remove foreign objects, such as hardware or small components, which may have fallen in through the ventilating spaces during bench use. Look for signs of overheating, which may indicate overloading due to misuse or malfunctioning of a part.
- c. Check that chassis-mounted components are securely held in place by their clamps or brackets. Wipe them with a soft cloth to remove heavy dust deposits.
- d. Check knobs, binding posts, terminal strips, and fuse extractor clamps for looseness. Tighten carefully, preserving alignment.

3-3. TROUBLE SHOOTING

WARNING

ALL NJE POWER SUPPLIES PRODUCE VOLTAGES DANGEROUS TO LIFE! EXERCISE EXTREME CARE IN PERFORMING ANY TEST AND REPAIRS WHEN THE EQUIPMENT IS ENERGIZED.

In general, component failures in NJE Power Supplies will be limited to line and load fuses by the conservative circuit design employed in their manufacture. The following general hints should be of assistance in locating faults:

a. NO OUTPUT VOLTAGE--LOW OUTPUT VOLTAGE

1. Check fuses, visual check is not enough - use low range ohmmeter.

2. Check input power line voltage with accurate ac voltmeter.

3. Check output of transformers, rectifiers and filter circuits. If there is no output from a given stage, or if it is significantly low, try replacing the component, first checking for short circuits in the circuit which follows it.

b. POOR REGULATION

1. Excessive load: Check that load current is within rating of supply.

2. Outside range: Check that load voltage to which supply is set lies within its rating. Often a supply can be adjusted to operate beyond the range for which it was designed, but it will not regulate properly over the entire current range under these conditions.

3. Low line voltage: Check input power line voltage with the supply plugged in and operating using accurate ac voltmeter. Remember that the ordinary multimeter or rectifier-type voltmeter rarely has an original accuracy of better than 3% of full scale, which may imply as much as 10-12 volts of error on the scale used for measurement of 115 volts ac. NJE supplies work effectively down to 105 volts rms, but below that value they lose their ability to regulate full load currents.


4. High line voltage: Excessively high line voltage can cause component failure in a power supply, as in any other electronic device. Avoid using your power supply in locations having more than 125 volts rms at any time.

c. EXCESSIVE RIPPLE

1. Verify that one polarity of supply has been connected to, or bypassed to the chassis. A "floating" supply has much more inherent hum and noise than one in which the chassis "ground" is at the same potential as the positive or negative output terminal. Check the load for "activity" by replacing it with a fixed resistor of appropriate value, connected by reasonably short leads. Check that measurement of ripple is valid. Ripple is best measured on calibrated oscilloscope.

2. Check all points discussed under Failure To Regulate above.

3. Check hum out of filter. If it is excessive, check the rectifiers for unbalance, the choke for shorts, and the filter capacitors for opens.

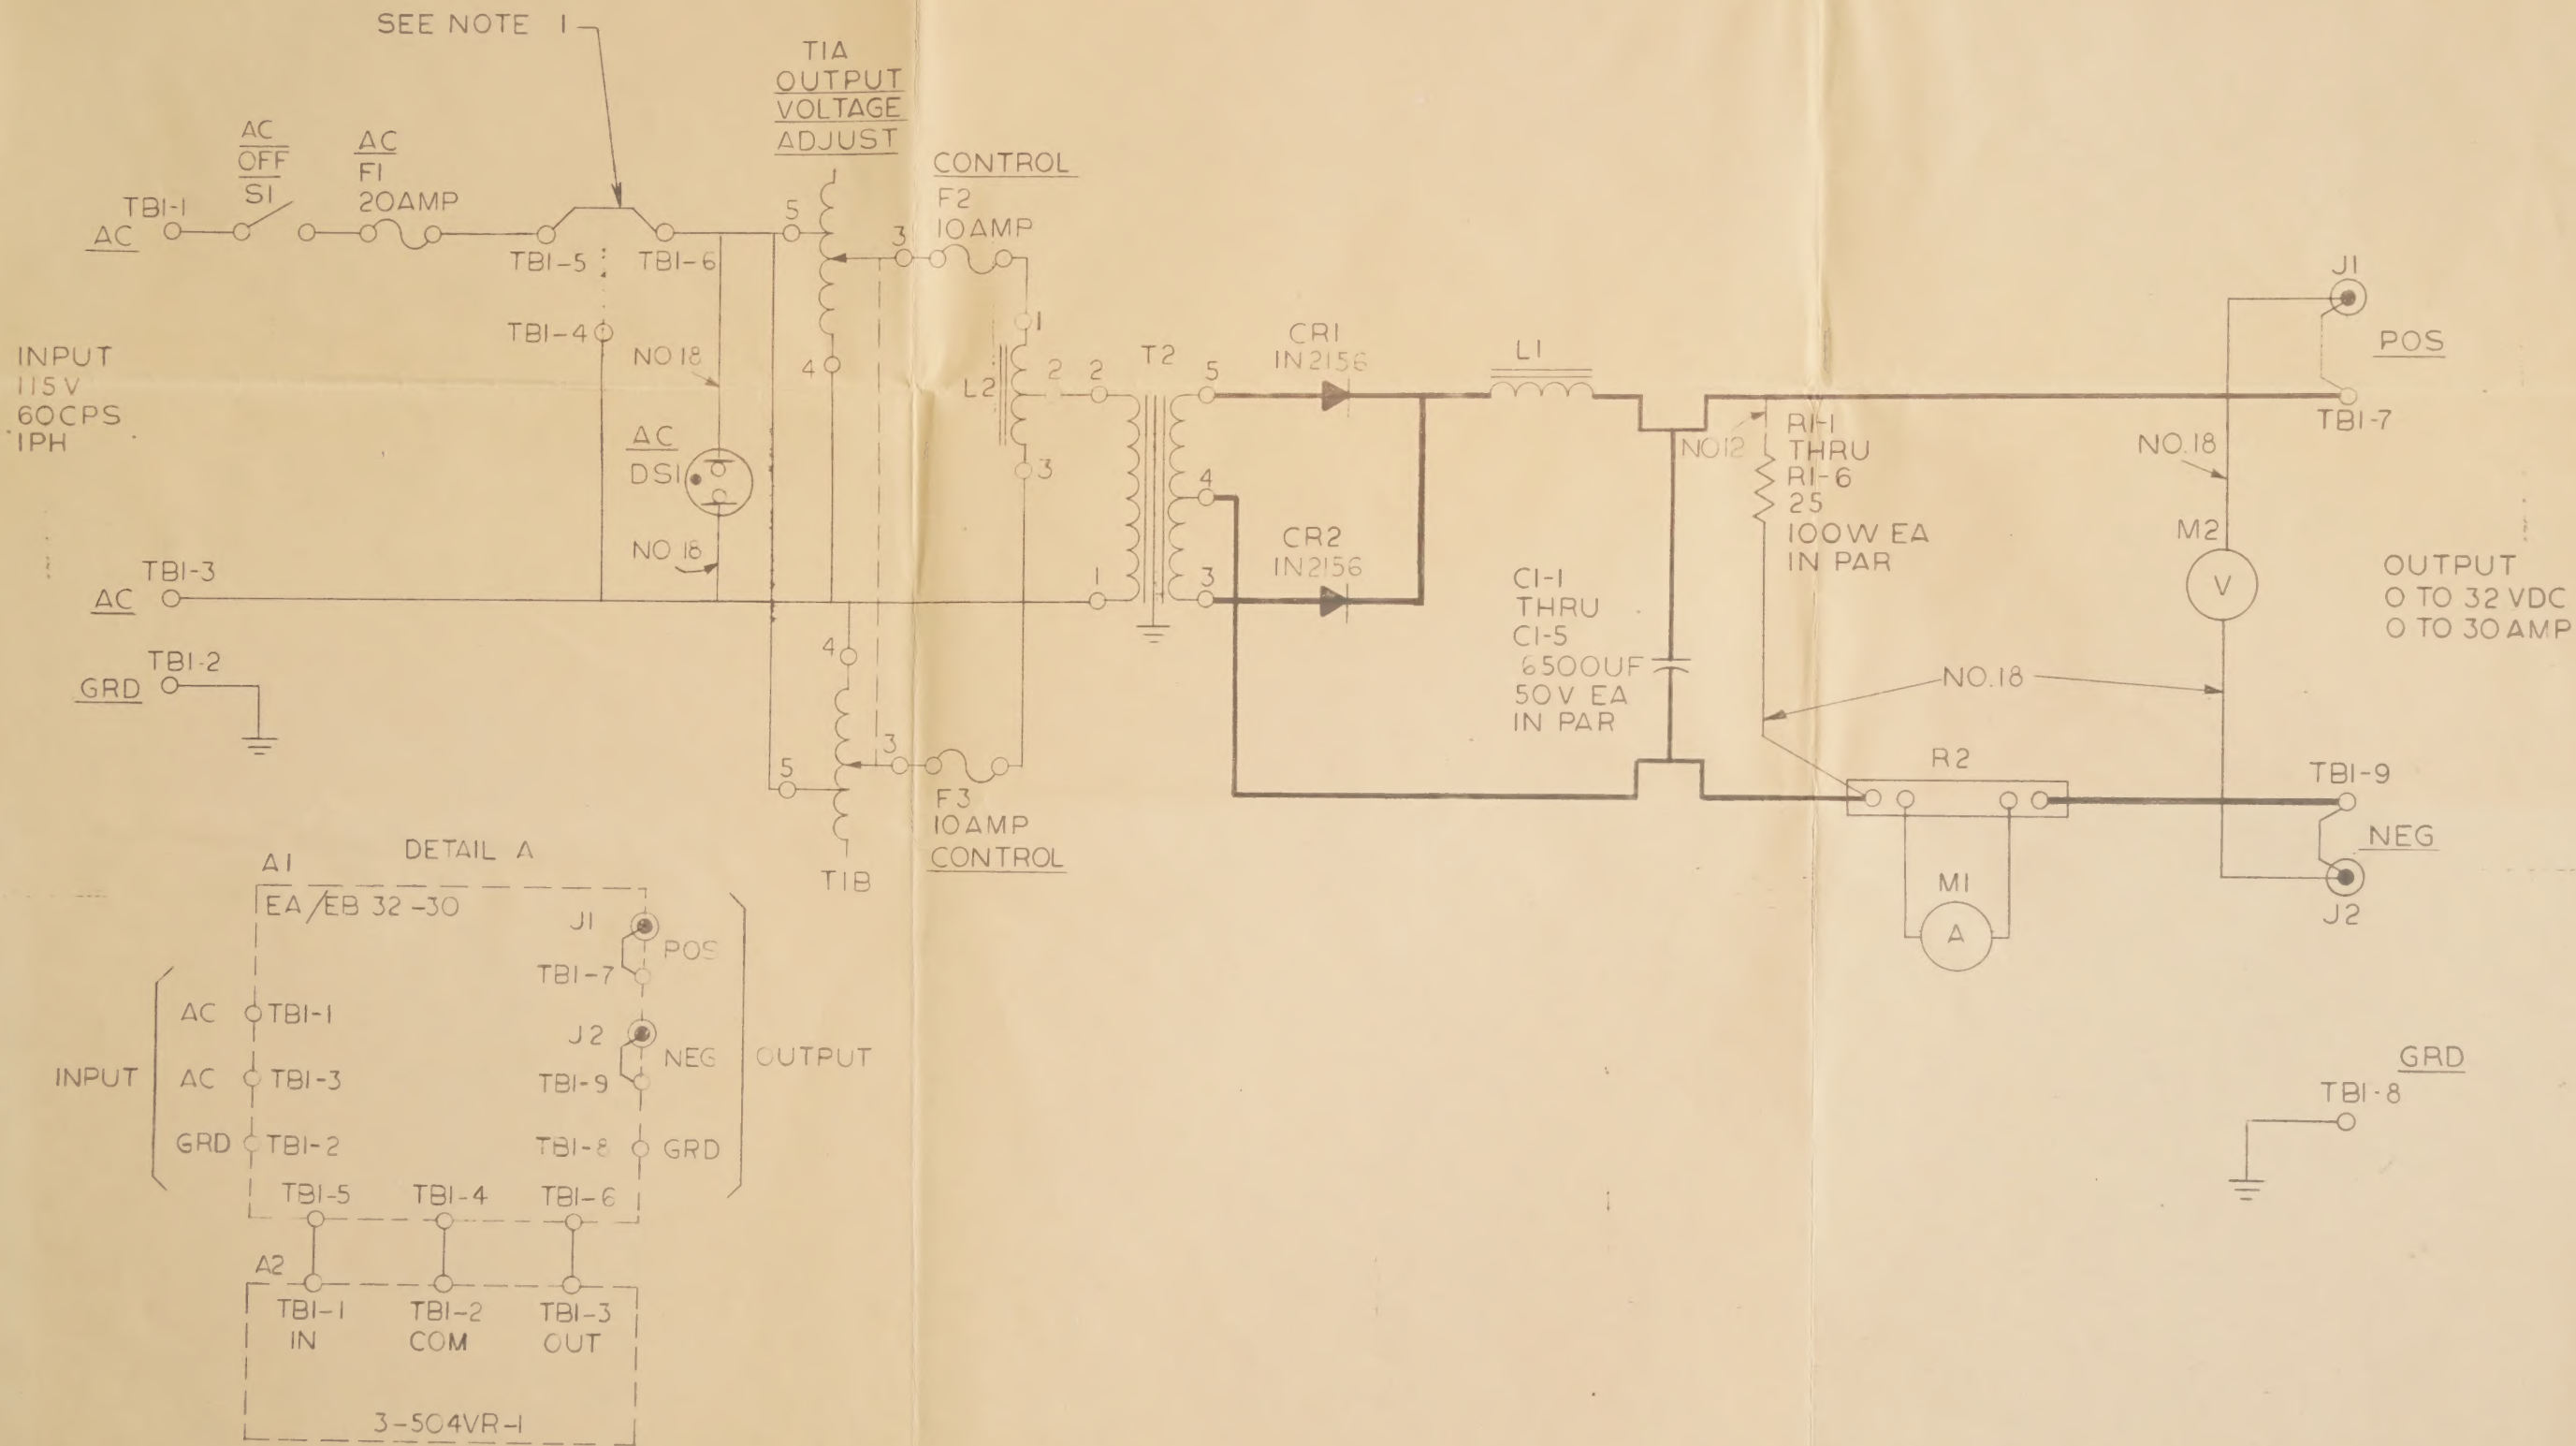

NOTES:

- FOR ELA & ELB MODELS OMIT JUMPER & USE DETAIL A.
- UNLESS OTHERWISE SPECIFIED,
— INDICATES NO.12 AWG WIRE,
— INDICATES NO. 6 AWG WIRE.

NJE CORPORATION			KENILWORTH, N. J.	
DRAFTSMAN	DATE	TITLE MODELS EA/ELA 32-30A & EB/ELB-32-30A SCHEMATIC DIAGRAM	DWG NO. 301785	REV A
JFB	1/27/60			
DESIGNER				
CHECKER	4/7/60			
ENGINEER				
APPROVED				



MANUFACTURERS REPRESENTATIVES



Waltham, Mass.

Burlingame Associates, Ltd.
974 Main St., Waltham, Mass.
TWInbrook 4-1955

Syracuse, N. Y.

Burlingame Associates, Ltd.
514 University Bldg, Syracuse, N. Y.
GRanite 4-7409

New York City Area

Burlingame Associates, Ltd.
510 South Fulton Ave., Mt. Vernon, N. Y.
MOUNT Vernon 4-7530

Upper Darby, Pa.

Burlingame Associates, Ltd.
222 Long Lane, Upper Darby, Pa.
SHerwood 7-9080

Washington, D.C.

Burlingame Associates, Ltd.
8218 Wisconsin Ave., N.W., Washington 14, D.C.
OLiver 4-6400

Alexandria, Va.

W. A. Brown & Associates, Inc.
3610 Mt. Vernon Ave., P.O. Box 5007
George Washington Sub Station
Alexandria, Virginia
TEmple 6-1800

Huntsville, Ala.

W. A. Brown & Associates, Inc.
3405 Lookout Drive, S.E., Huntsville, Ala.
JEfferson 6-8393

Indian River City, Fla.

W. A. Brown & Associates, Inc.
P.O. Box 286, 201 Capron Rd.,
Indian River City, Florida
AMherst 7-0411

Orlando, Fla.

W. A. Brown & Associates, Inc.
711 Magnolia Ave., Orlando, Florida
GARden 5-5682

Winston-Salem, N.C.

W. A. Brown & Assoc., Ltd.
1707 Princeton St., S.W., Winston-Salem, N.C.
PArk 5-5384

Detroit, Mich.

Ridgway Associates, Inc.
1204 No. Woodward Ave., Royal Oak, Mich.
LIcOlN 6-3312

Cleveland, Ohio

Ridgway Associates, Inc.
5915 Schaaf Road, Cleveland 31, Ohio
LAfayette 4-1421

Dayton, Ohio

Ridgway Associates, Inc.
3130 Far Hills Avenue, Dayton 29, Ohio
EXminster 3-2167

Chicago, Ill.

Ridgway Associates, Inc.
6100 W. North Ave., Chicago 39, Ill.
TUxedo 9-5715

Indianapolis, Ind.

Ridgway Associates, Inc.
1224 N. Capitol, Indianapolis 2, Indiana
MElrose 5-2401

Kansas City, Mo.

Lee Mark Associates
4021 W. 86th St., Kansas City 15, Mo.
NIagara 2-3313

St. Louis, Mo.

Lee Mark Associates
1500 Big Bend Blvd., St. Louis 17, Missouri
MIssion 7-1470

San Marino, Calif.

G. S. Marshall Company
2065 Huntington Drive, San Marino, California
MUrray 1-6781

San Diego, Calif.

G. S. Marshall Company
3525 Fifth Ave., San Diego, California
CYpress 8-8234 CYpress 8-8235

San Francisco, Calif.

G. S. Marshall Company
2015 South El Camino Real
Redwood City, California
EMerson 6-8214

Tucson, Arizona

G. S. Marshall Company
2030 East Broadway, Tucson, Arizona
MAIne 2-4719

Centerville, Utah

Barnhill Associates
207 North 4th East, Centerville, Utah
ELgin 5-5101

Albuquerque, N.M.

Barnhill Associates
8310 Cutler Avenue, Albuquerque, New Mexico
AXtel 9-7997

Denver, Colo.

Barnhill Associates
1170 South Sheridan Blvd., Denver, Colorado
WEst 5-4645

Seattle, Washington

Burt C. Porter Company
1209 Poplar Place, Seattle, Washington
EASt 3-8330

Montreal, Canada

Radionics, Ltd.
8230 Mayrand St., Montreal, Canada
REgent 9-5517

OUR WARRANTY: N J E Corp. warrants each power supply manufactured by them to be free from defects in material and workmanship. Our liability under this warranty is limited to servicing or adjusting any instrument returned to the factory for that purpose and to replacing any defective parts thereof, except tubes, semi-conductors and fuses. This warranty is effective for one year after delivery to the original purchaser when the instrument is returned, transportation charges prepaid by the original purchaser, and which upon our examination is disclosed to our satisfaction to be defective. If the fault has been caused by misuse or abnormal conditions of operation, repairs will be billed at cost. In this case, an estimate will be submitted before the work is started. Written permission must be obtained from the factory, before a supply may be returned for examination.

NJE CORPORATION
Electronic Development & Manufacturing
Kenilworth, New Jersey • BRIDGE 2-6000
TELEFAX: FFP • TWX: CRANFORD 51



NJE CORPORATION

Electronic Development & Manufacturing

Kenilworth, New Jersey • BRIDGE 2-6000

TELEFAX: FFP • TWX: CRANFORD 51

PRINTED
IN
U.S.A.